


VISIONSWIPE

Installation guide

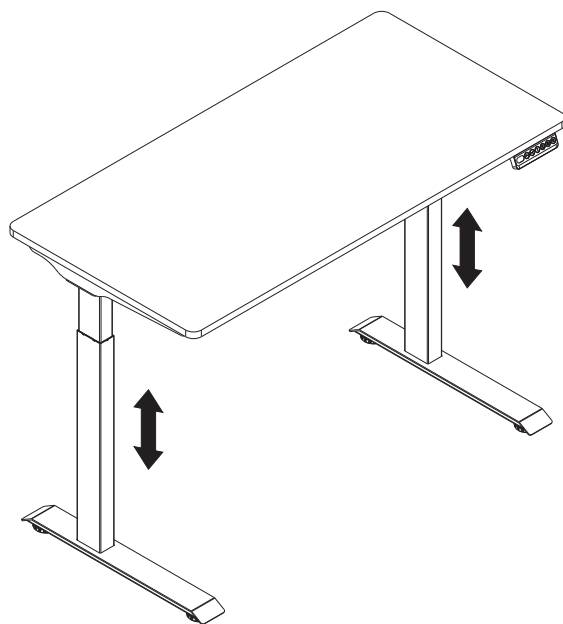

Technical Data

Column Number	2
Maximum Load	50KG
Max Speed	25mm/s
Input Voltage	100-240V
Lowest Position	730mm
Highest Position	1230mm
Desktop Size	1200mm(length) 600mm(width)
Duty Cycle	Continuous operation for 2 mins at most after pause for 18 mins
Applicable Temperature	0~40°C

Accessory List

Attention: The drawings below are only for reference which might be slightly different from the actual object, please in kind prevail. Any tools missing or installation problems, please contact the customer service firstly.

A x4



M6

B x8



M6

C x1



4x4

D x1




5x5(With cross)

Part List

No.	Part	Qty	No.	Part	Qty	No.	Part	Qty
①	Tabletop	1	②	Lifting column	2	③	Handset	1
④	Pedestal	2	⑤	Power plug	1	⑥	Adaptor	1
⑦	Cable mounts	4	⑧	Cable	1	⑨	Screw for Handset	3

Installation Instruction

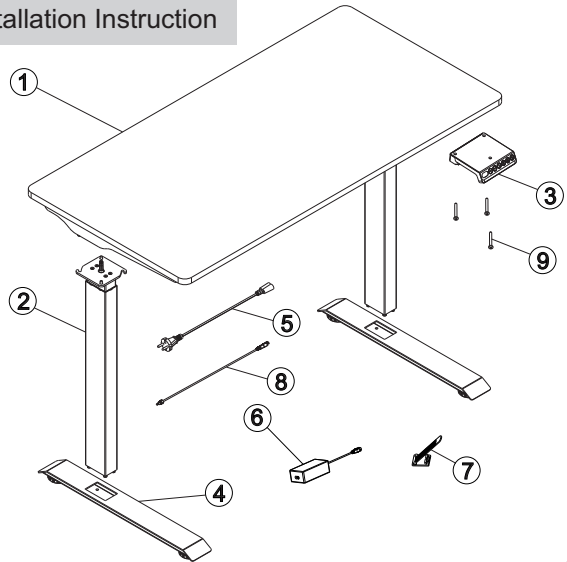

STEP1

Install the lifting column

A x4



C 4x4



longside of the lifting column




Rotate the column after inserting it to the bottom to avoid height difference

Shortside of the desktop

Install the lifting column (2) to the tabletop(1), then tighten the screws (A) with allen key (C).


1

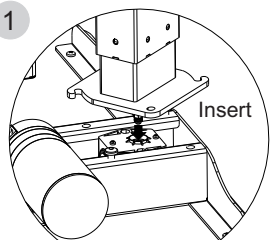

Insert


Insert the hexagon head of the column along the wiring trough, the side of the wire head facing the motor

2

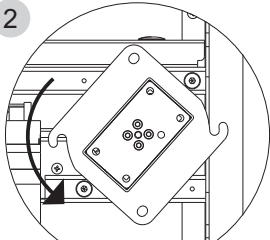

Rotate the column after inserting it, making the screws on the supporting beam into the column slot


3

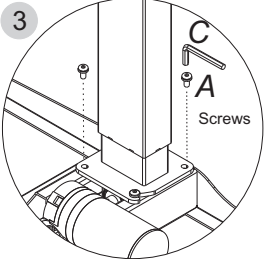

Screws

Tighten the screws (A) with 4x4 allen key

4

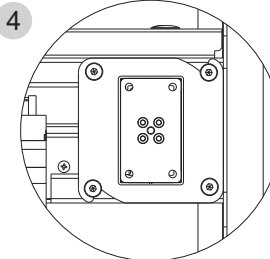

STEP2

Install the pedestal

B x8



C 4x4



2

4

4

C

B

Install the feet (4) to the lifting columns (2) with the screw (B) and tighten it with 4*4 allen key (C).


STEP3

Install the handset

D 5x5



5x5

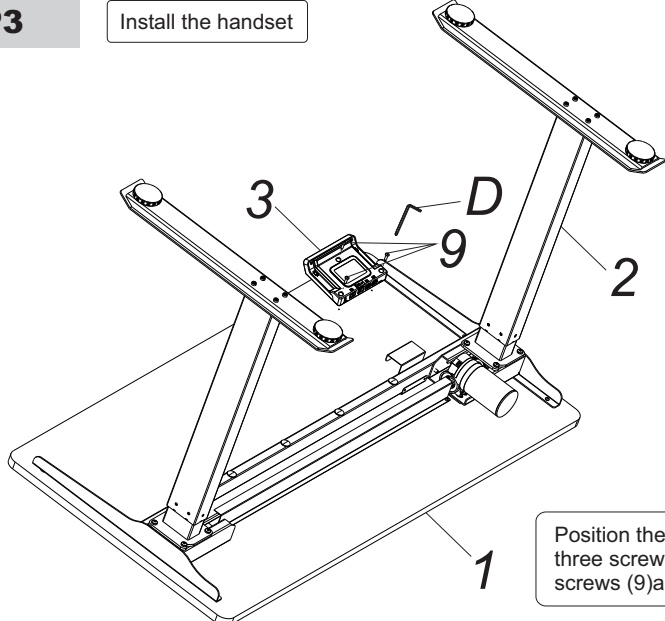


Position the handset (3) as shown in the picture to align the three screw holes on the tabletop, then fix it with the screws (9) and tighten them with 5*5 allen key (D).

9

D

STEP4

Connect all cables to the adaptor

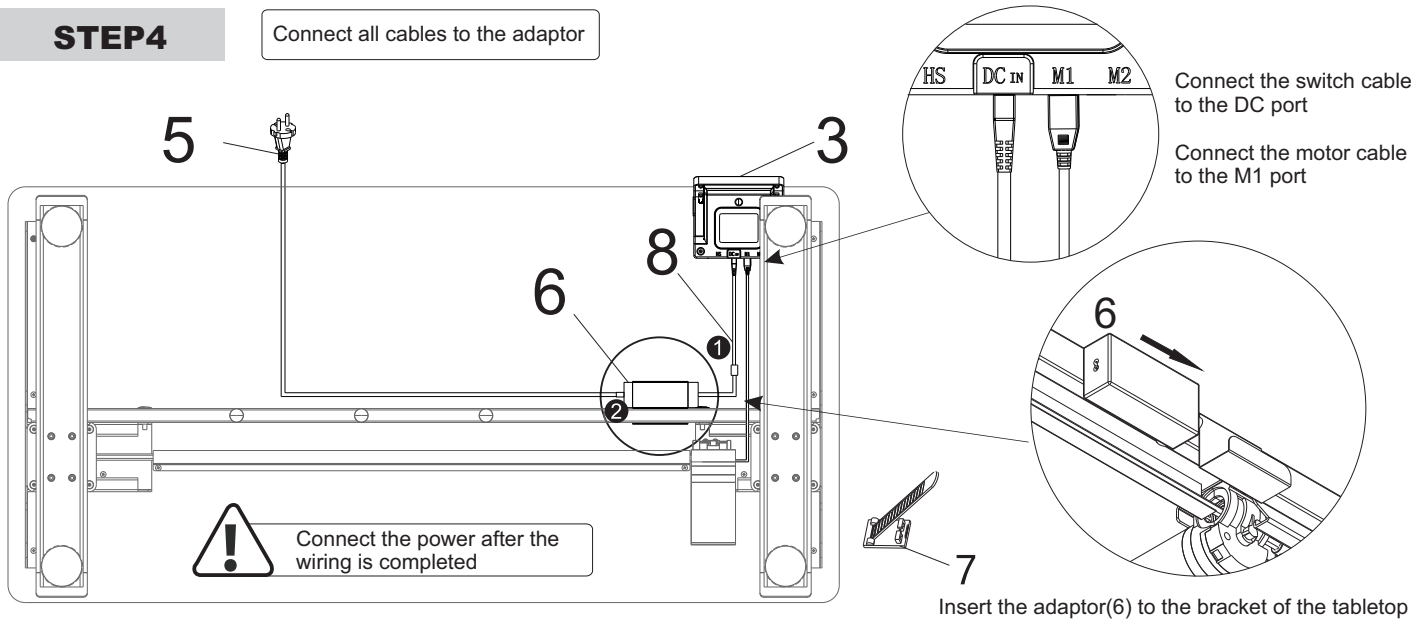


Connect the switch cable to the DC port

Connect the motor cable to the M1 port


Insert the adaptor(6) to the bracket of the tabletop

Fix the cables to the tabletop with cable management(7) to keep desk clean.

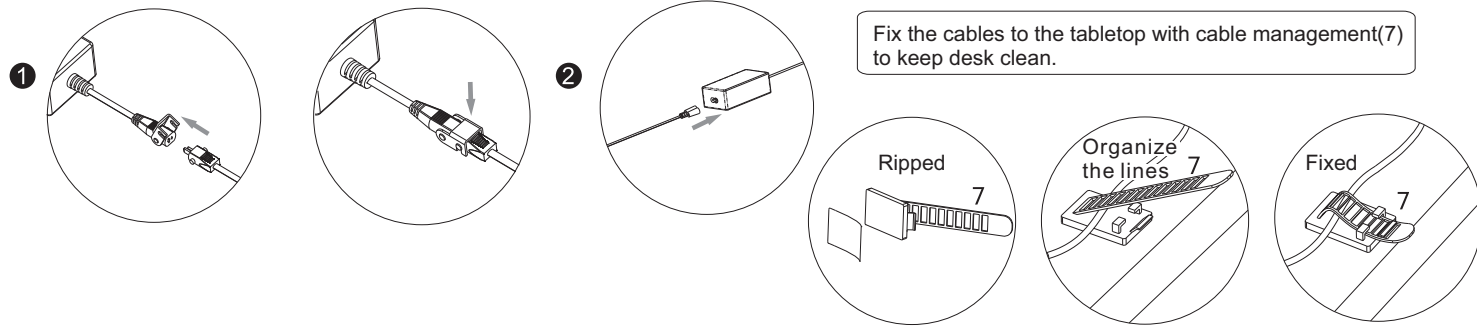

Operation Instruction

Key button

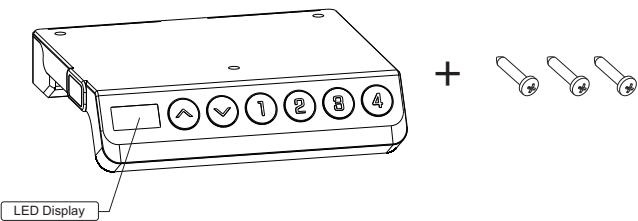

Button introduction: There are 6 buttons that "▲", "▼", "1", "2", "3", "4"

- (1) "▲" : Adjust the desk upwards
- (2) "▼" : Adjust the desk downwards
- (3)"1": Position 1, the first height user save
- (4)"2": Position 2, the second height user save
- (5)"3": Position 3, the third height user save
- (6)"4": Position 4, the fourth height user save

Operating Instructions

- Lifting Function:
The height of the desk can be adjusted up or down by pressing the "▲" or "▼" button, and the current height will show on the display.

- Height Memory Function:
 - 1.When the desk is in a static state, long press the button "1" for three seconds, the display shows "5-1", which means the save is successful.
 - 2.Buttons "2", "3", and "4" all have the same height memory function as button "1", repeat the above steps to save the height to the corresponding position 2 or 3 or 4, and the display screen will corresponding show "5-2" or "5-3" or "5-4".
 - 3.When the tabletop is at any height, press the "1" or "2" or "3" or "4" button to automatically adjust to the previously saved location.
- 29V DC power supply function
 - 1.In the operating state of the desk, the 2pin at the back of the control box does not output a DC 29V voltage.
 - 2.In the static state of the desk, the 2pin at the back of the control box will output a DC 29V voltage.
- Anti-Collision Sensor Level Adjustment
 - 1.Simultaneously press and hold the "▲" and "▼" buttons for 5 seconds to switch the sensitivity. One operation can switch to one level, divided into 4 levels—"H-1", "H-2", "H-3", "H-4".
 2. The display shows "H-1" means the anti-collision function is turned off; the display shows "H-2" means low sensitivity; the display shows "H-3" means medium sensitivity; the display shows "H-4" means high sensitivity. (Factory default A-3)
 - 3.When the desk rises or falls, it will rebound immediately when encountering obstacles to prevent damage.
- Code Processing
 - 1.Reset function definition: When the LED display shows "H5f" or "r5L", keep pressing the "▼" button until the desk reaches the lowest position and bounce up to stop, the display shows the lowest height, release the "▼" button to reset, then the desk can be used normally.
 - 2.If the words "E01" or "E02" appear, please let the desk rest for more than 18 minutes before it can be used normally.
 - 3.If other codes appear and there is no response after pressing the "▼" button, please make sure that the cable is not damaged and the connection is normal, and power off for more than 10 seconds, then turn on the power again, "H5f" or "r5L" is displayed, then long press the "▼" button to reset.
 - 4.If the above operations are performed, the table still does not operate normally, please contact customer service.

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1.Check if all the cables be connected well 2.Contact your supplier or dealer
No response while pressing up arrow/ down arrow after connected with a power supply	1.Check if all the cables be connected well 2.Contact your supplier or dealer
Rising in a low speed	1. Check if overloaded, max loading: 50kg; 2. Contact your supplier or dealer
The motor not move as instructed	1. Contact your supplier or dealer
Go down but not go up	1.Reposition 2.Contact your supplier or dealer
Downward sliding	1. Check if overloaded, max loading: 50kg; 2. Contact your supplier or dealer
Frequently Reposition	1. Check if overloaded, max loading: 50kg; 2. Contact your supplier or dealer
Overwork (Duty cycle: Max 2min on/18min OFF)	1. Restart after suspend for 18mins while connecting with power, 2. Contact your supplier or dealer;
Not enough up&down height	1.Perform a reset operation; 2.Contact your supplier or dealer.



Attention

1. Power supply: AC100V-240V,50/60HZ
2. Service Environment: 0-40℃
3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
5. Check carefully to ensure correct and complete assembly before using.
6. Be familiar with all functions and program settings of the product before first use.
7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on manufacturers.
8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
11. Cleaning and user maintenance shall not be made by children without supervision.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
14. Keep the original package of the equipment if necessary in case of the future use in transportation.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

