




INSTRUCTIONS MANUAL

PLEASE READ BEFORE USAGE

TESSA

TIGER DELUXE SAFE BOX


Introduction

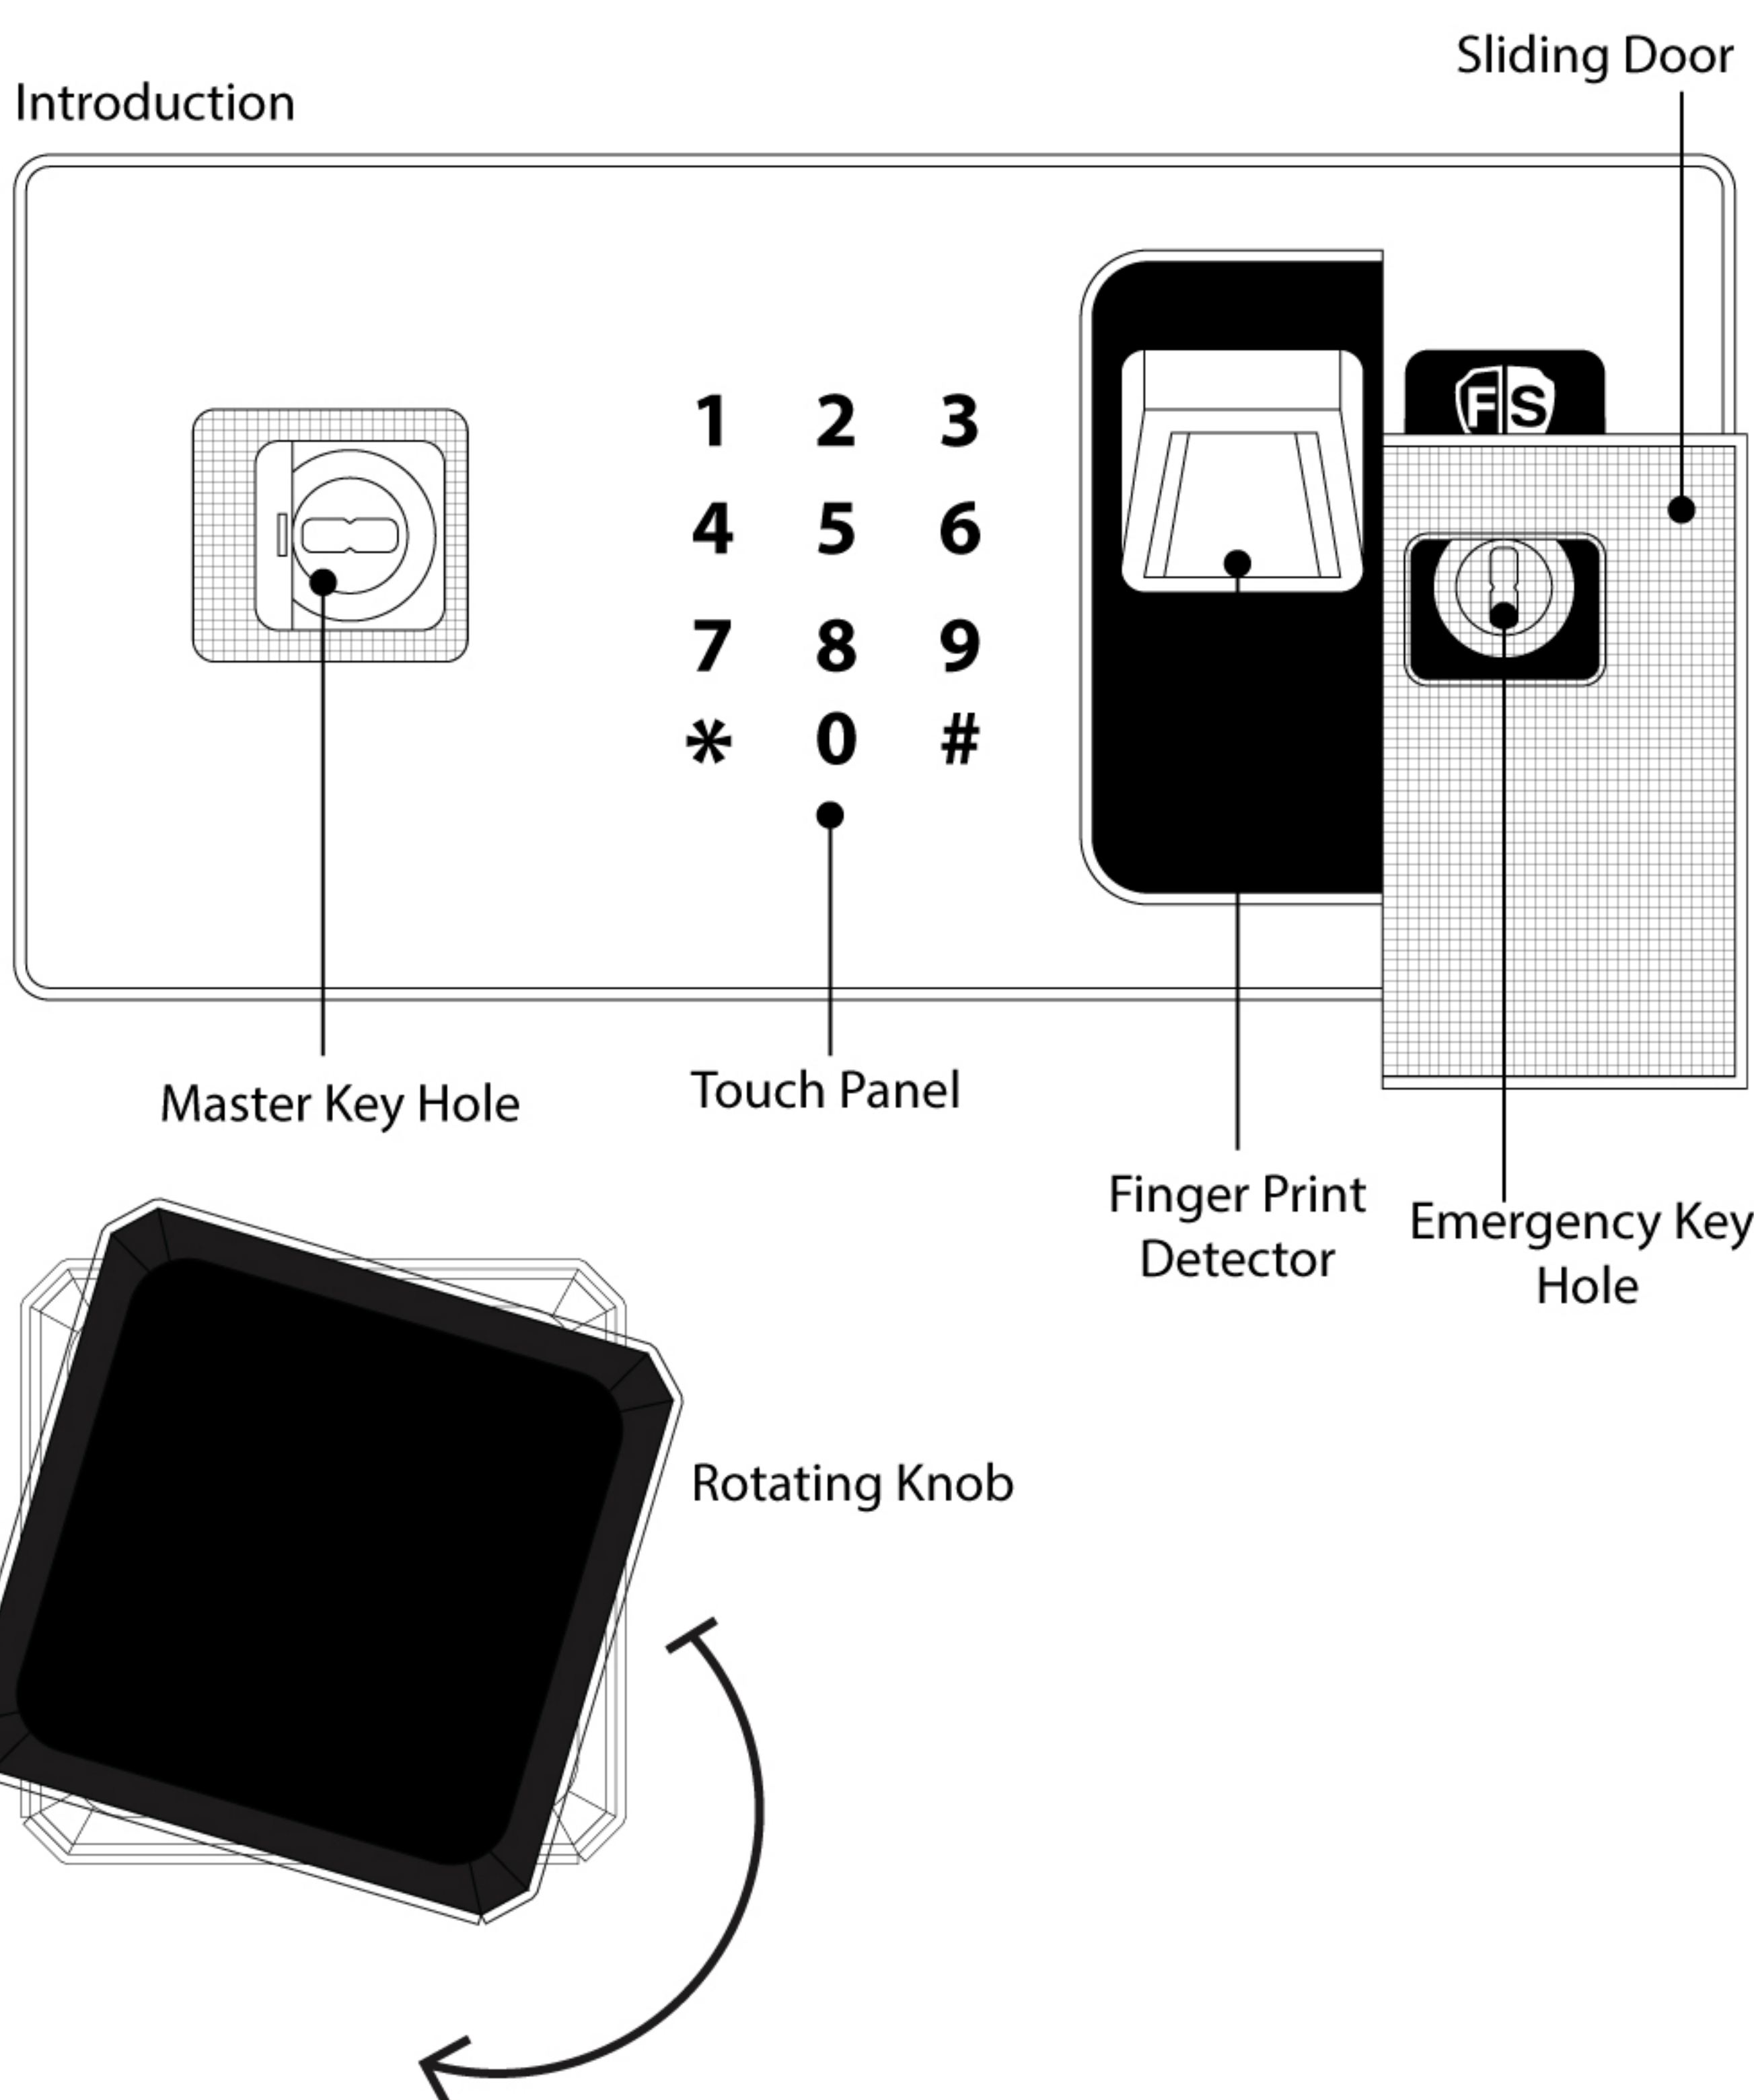

First Time Usage :

Step 1 :

Insert both **Master Key** and **Emergency Key** in to the safe

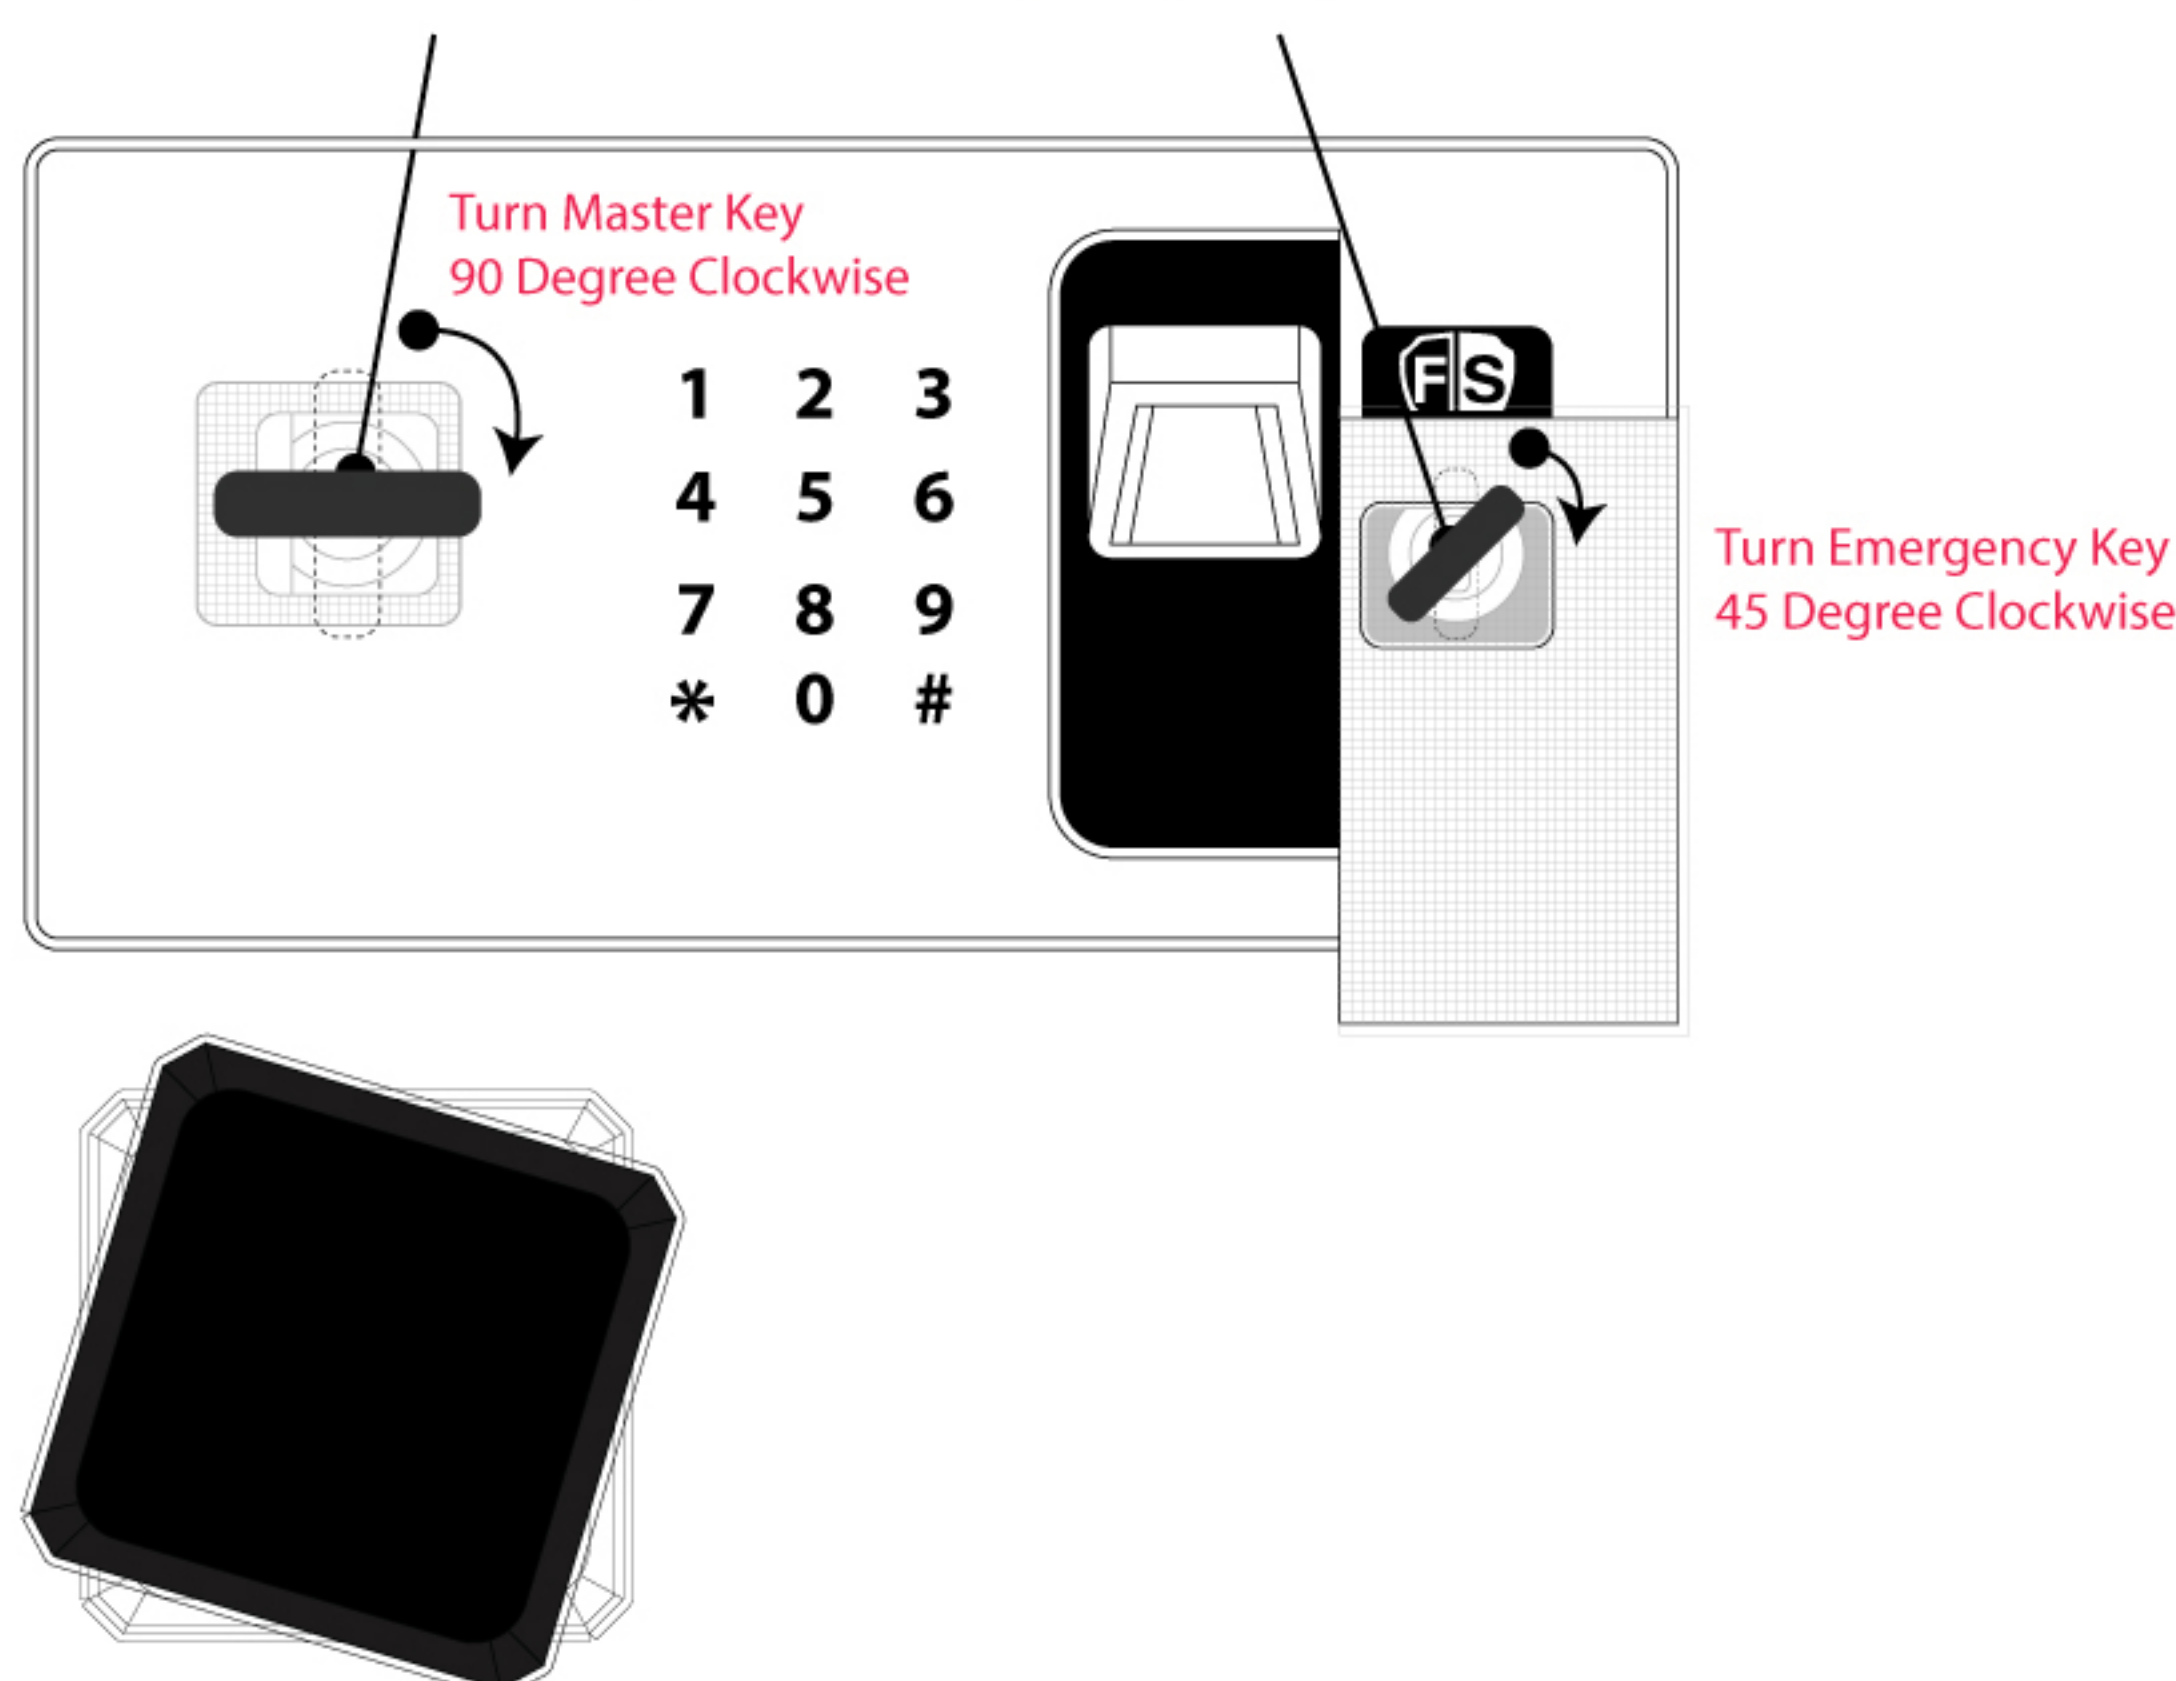

Rotate the Knob in clockwise to unlock and open the safe

Step 2 :

Press the Red Button Located at the back of the door



System will request you to insert the Master Code.

Insert default **Master Code 123456#**

System will then enter Setting Mode

- A** Press **1** for setting **Passcode**
- B** Press **2** for **Fingerprint Registration**
- C** Press **3** to delete fingerprint data
- D** Press **4** for change of **Master Code**
- E** Press **5** for **Locking Method**

A Setting User Passcode

- Press "1" on Setting Mode
- Enter default Master Code (123456#)
- Enter desire user passcode, follow by # Key
- Re-enter desire user passcode, follow by # Key
- User Passcode is set.

B Setting Fingerprint

- Press "2" on Setting Mode
- Enter default Master Code (123456#)
- Place desire finger on the Fingerprint Detector
- User fingerprint set.
- Repeat to register more fingerprint

C Deleting of Fingerprint

- Press "3" on Setting Mode
 - All fingerprint data will be clear.
- (Note : when no fingerprint is set, safe can be unlock with any fingerprint)

D Changing of Master Code

- Press "4" on Setting Mode
- Enter default Master Code (123456#)
- Enter desire user Mastercode, follow by # Key
- Re-enter desire user Mastercode, follow by # Key
- New Mastercode is set.

(Note : Once Mastercode is set, the default mastercode will no longer work. Unless factory reset)

E Changing of Locking Method

- Press "5" on Setting Mode
- Enter default Master Code (123456#)
- Select "1" for Common Mode / Select "2" for Security Mode
- Locking Method set.

(Note : Common Mode - Require Master Key + Fingerprint / Passcode to unlock)

(Note : Security Mode - Require Master Key + Fingerprint + Passcode to unlock)

Factory Reset

To factory reset the safe to the initial state

- Unlock the safe
- Long press the Red Button located at the back of the door
- The safe is resetted.

(Note : Once factory resetted, there will be no data of fingerprint and passcode. Safe can be unlock with any fingerprint.)

(Note : Master Code will be of default) (123456#)

(Note : To open the safe, Master Key and Emergency key is to be insert into the safe and follow the instruction for first time usage.)